Brookstone®

iConvert®

Instant Scan Digital Frame

SCAN, SAVE AND ENJOY–NO COMPUTER NEEDED!

TABLE OF CONTENTS

Warnings and Cautions 2
Location of Parts and Controls 7
Remote Control Battery Installation 11
Remote Control Operation 11
Scanning 11
Select a Storage Device 14
Photo 15
Scanned Image 22
Music 25
Audio Mode Menu 26
Video 27
Video Mode Menu 28
Calendar/Clock 28
Calendar Mode Menu 29
System Setup 31
Setup Mode Menu 31
Printing Photos 32
Frequently Asked Questions 33
Specifications 35
Warranty 37

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled, splashed or dripped onto the unit.
7. Do not place objects filled with liquid, such as vases, on the unit.
8. Turning off the main switch does not completely disconnect power. Unplug unit directly from power outlet when not in use.

WARNING

1. Keep away from children. This is not a toy.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

SAVE THESE INSTRUCTIONS

LOCATION OF PARTS AND CONTROLS

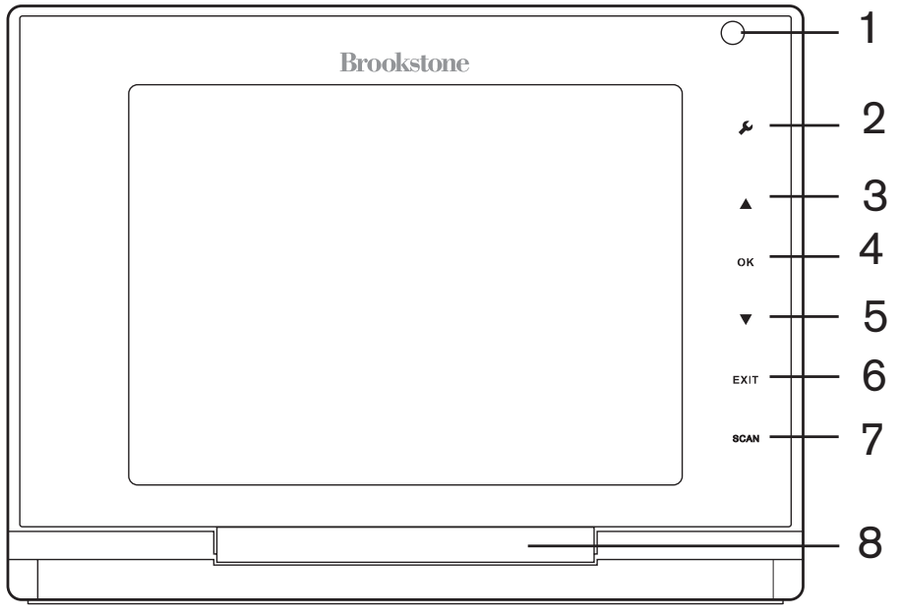

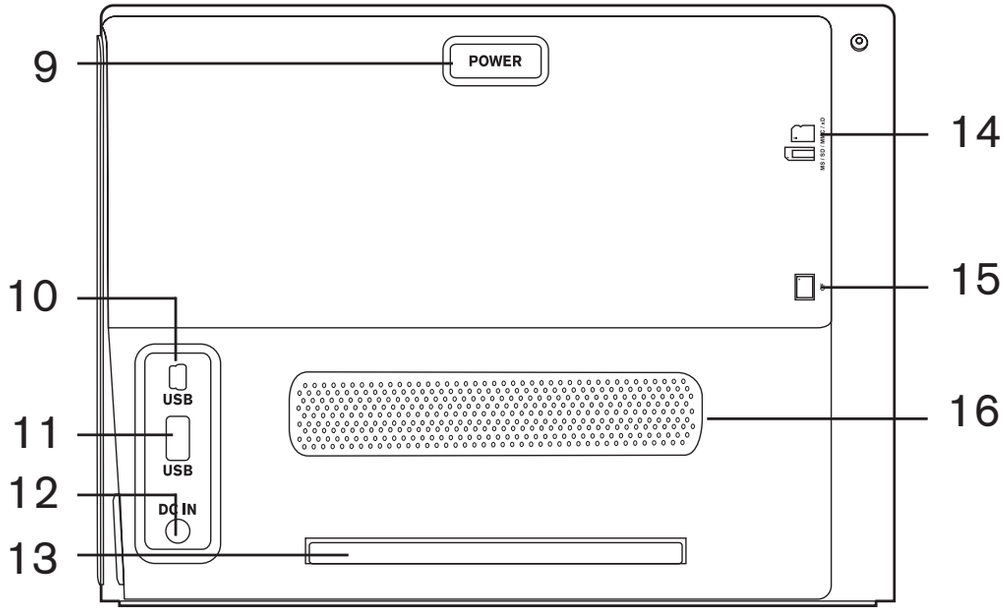

LOCATION OF PARTS AND CONTROLS

1. Remote Control Sensor: Receive the signals from remote control.
2. Setup: Press to access the setup menu*.
3. ▲ Up: Moves up in the menus*.
4. OK: Press to make selections in the menus or setting modes*.
5. ▼ Down: Moves down in the menus*.
6. EXIT: Return to the previous menu or stop the playback under the Music mode*.
7. SCAN Press to scan a photo*.
8. Photo feed slot: Where you insert your photo for scanning.
9. POWER/Standby button: Press to power on the unit. Press and hold for 3-4 seconds to turn off. Red light: Standby mode, Green light: power is on.
10. Mini USB connector: Connects to a PC or a PictBridgeTM Printer.
11. USB A-type connector: Connects to a USB flash drive.
12. DC-IN: Connects to the supplied AC power adapter (12V, 0.83A).
13. Scanner output slot: Releases the photo after scanning.
14. SD/MMC/MS/xD card slot: Accommodates an SD, MMC, MS or xD card.
15. CF card slot: Accommodates a CF type I card.
16. Speaker: Plays sound files.

*Buttons may be used directly on the Digital Frame with Scanner itself, or the remote.

LOCATION OF CONTROLS

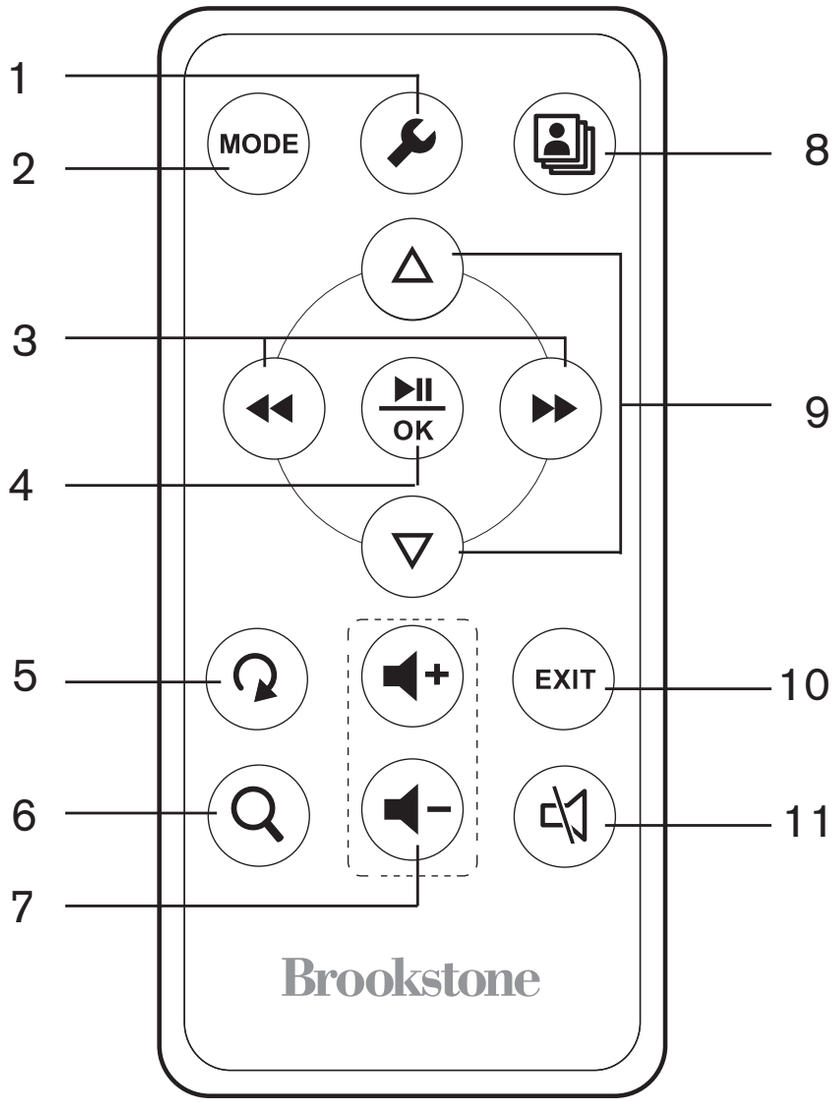

LOCATION OF CONTROLS

1. **Setup:** Press to access the Setup Menu.

2. **Mode:** Press to return to the Main Menu.

3. / Moves left/right in the menus in all modes except Video mode. In Video mode, these buttons control fast backward/fast forward during video playback.

4. **Play:** Press to playback the selected file.
   Pause: Press to pause the current playback file.
   OK: Press to make the selection in the menu or setting modes.

5. **Rotate:** Press to rotate the photo by 90° clockwise in Browse mode.

6. **Zoom:** Press to enlarge photo in Photo mode. Each press will enlarge the photo in the sequence of 2x, 3x, 4x, 5x, and then revert to its original size.

7. / **Volume:** Press the button to increase and the button to decrease sound Volume levels.

8. **Slideshow:** Press to view photos in a Slideshow.

9. / **Up/Down:** Moves up/down in the menus.

10. **Exit:** Returns to the previous menu or stop the playback under the Music mode.

11. **Mute:** Press to the Mute the volume.

REMOTE CONTROL BATTERY INSTALLATION

1. If the remote control is being used for the first time, remove the insulating mylar strip from the battery compartment to allow contact.
2. To replace the battery, press and hold the battery release tab in the direction of arrow as shown in the diagram on the back of the remote control.
3. Pull out the battery holder completely.
4. Remove the old battery.
5. Place a new CR2025 battery in the battery tray, positive side up.
6. Slide the battery holder back into the remote securely.

REMOTE CONTROL OPERATION

Point the remote control at the unit from no more than 10 feet and within 60° of the front of the unit. The operating distance may vary according to the brightness of the room.

Note: If the remote control unit fails to work, even when it is operated near the player, replace the battery.

SCANNING

PHOTO PROTECTIVE SLEEVE

Place smaller or damaged photos in the protective sleeve (included) to prevent damage. Protective sleeve should also be used if photos are not feeding into the scanner straight.

Remove white cleaning cloth from inside the sleeve before use.

Note: Periodically run the white cleaning cloth through the scanner to clean.

SCANNING A PHOTO

1. Power on the unit.
2. Press the SCAN button to enable the scan function.
3. Adjust the Paper Feed Guide on the scanner to the size of your photo.
4. Insert the picture in the Protective Sleeve (if needed) face up and push it forward into the Photo Feed Slot until the picture is automatically pulled in and scanned.
5. Do not press any buttons or touch photo while the scanning is in progress. Wait until the process is complete.

Note: This scanner supports photo sizes from 1.5" x 2" to 4" x 6". DO NOT insert photos smaller than 1.5" x 2" without using the PHOTO PROTECTIVE SLEEVE or larger than 4" x 6". The quality of the scanned image may vary due to bright light.

SCANNER MENU

Once the scan process is completed, a scanner menu will appear on the screen (see below) . Press ▲ or ▼ to select your desired choice.

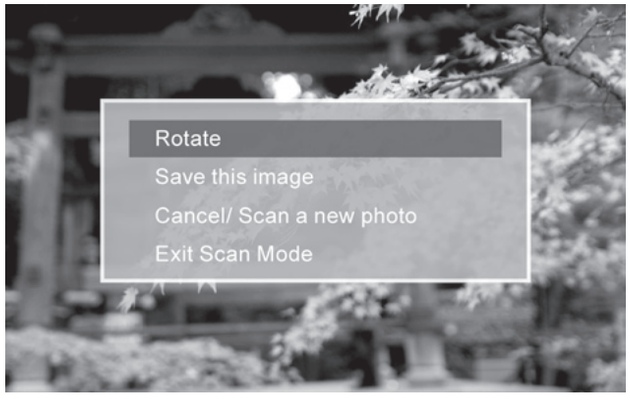

ROTATE

To rotate the scanned photo, press ▲ or ▼ to highlight **Rotate**, then press ⏯ OK. The scanned photo will be rotated. Each time the ⏯ OK is pressed, the photo will rotate by 90° clockwise.

SAVE THIS IMAGE

Press ▲ or ▼ to highlight **Save This Image**, then press OK to save. A status message will appear on the screen to indicate when the photo is saved.

Image showing the photo being saved is in progress.

Note: Saved scanned images are saved into the Scanned Image folder on the frame. The saved file will be named with a 4-digit number, with Scan as a prefix which runs from 0001 to 9999. For example, scan_0001.jpg. When the counter reaches 9999 it simply starts over from 0001 again. Restoring the unit to default does not reset this counter (see page 34–Factory Default)

CANCEL/SCAN A NEW PHOTO

To erase the image you just scanned and scan a new photo, press ▲ or ▼ to highlight **Cancel/Scan A New Photo**, then press OK. The previously scanned photo will be erased, and the unit will be ready to scan the next photo.

EXIT SCAN MODE

Press ▲ or ▼ to highlight **Exit Scan** mode, then press OK to exit and return to the Scanned Image mode. The last scanned photo will not be saved in the internal memory.

SELECT A STORAGE DEVICE

This photo frame can play back content from internal and external memory devices such as USB flash drives, and memory cards (MMC, SD, MS/MS pro, CF type I, and xD cards) typically used with digital cameras. More than one external memory device can be inserted at the same time. However, the photo frame can only select one memory device at a time for playback of its content.

1. Power on the unit. The Device Select menu will appear on the screen.
2. When a memory device is inserted, its corresponding icon will light up (see below). Use the ▲/▼/◀◀/▶▶ buttons to highlight the desired storage device, then press OK/OK to enter.
3. After selecting a memory device, the Main Menu will appear on the screen (see to the right).

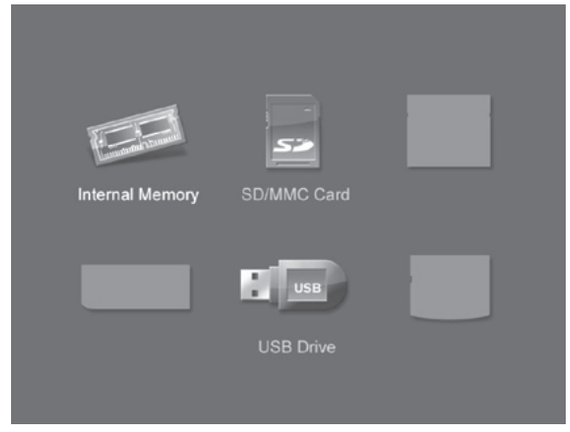

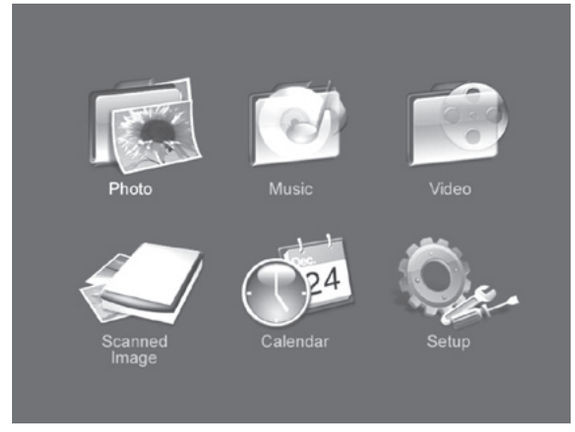

PHOTO

THUMBNAIL MODE

1. From the MAIN MENU, select Photo and press OK to enter. All photos stored in the selected storage device will be displayed via thumbnail mode first.
2. Use the ▲/▼/◀◀/▶▶ buttons to navigate thumbnails. Highlight the photo you would like to view and press OK to view it full screen.

PHOTO THUMBNAIL MODE SETTINGS

1. During the thumbnail mode, you may select a photo then press 🔧 to access the Settings menu.
2. Use the ▲/▼/◀◀/▶▶ buttons to browse through available options, and press OK to select desired option (see chart below).

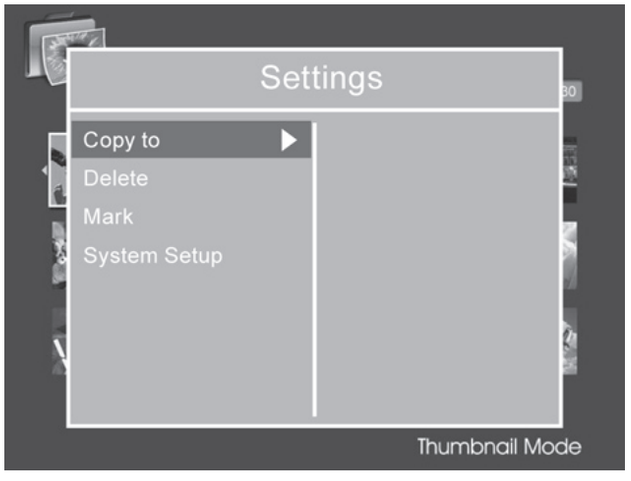

PHOTO THUMBNAIL MODE SETTINGS

Press ⚙ to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Copy to	This option allows you to copy the selected photo and/or scanned image from the current memory device to other available memory device(s). Available memory devices will be displayed when this option is selected.
Delete	To delete the selected photo, select Yes. Otherwise choose No to cancel.
Mark	This function allows you to select multiple photos to copy or delete* (page 19).
System Setup	Bring up the System Setup menu.

Note: While viewing photos/music/video from an external memory device, if you delete a photo/music/video from the thumbnail mode the photo/music/video will also be deleted from the external memory device.

Mark: Allows you to select multiple photos to copy or delete.

Select Mark Several: if you want to select multiple photos. It will bring you back to the thumbnail screen for photo selection. Use the ▲/▼/◀◀/▶▶ buttons and press **OK** to make your selection (see below). A check mark will appear on all selected photos. Press 🔧 to return to Settings menu to continue Copy to, or Delete function.

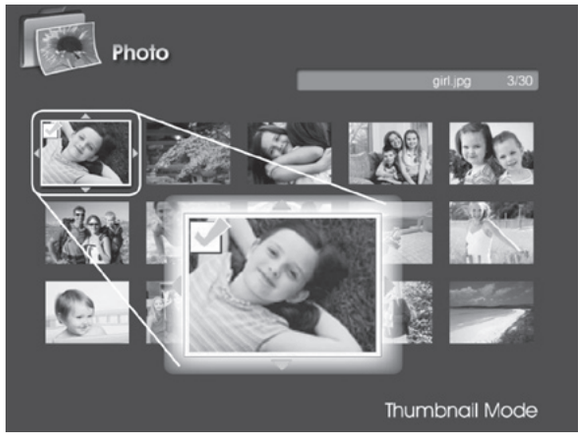

Note: **Select Mark Several** selects thumbnails currently viewed on screen. It cannot select more than 15 photos at a time.

Select Mark All: Select to choose all the photos in the folder.

Unmark All: Selects to clear your selection(s).

Photo Browse Mode: From the Thumbnail mode, select a photo then press ⏯ OK to enter the Browse mode (see below).

Browse Mode

Note: By default, the photo will display in its original size. Please refer to Display Image Size in the Settings menu on page 23 to alter view.

Manual Rotate: Photos can be manually rotated by pressing the button (on the remote) in full screen mode. Each press of this button will rotate the photo by 90º clockwise.

Auto Rotate: Landscape or portrait display of a photo will be automatically switched according to the unit orientation. If the horizontally placed photo frame is rotated right by 90˚, the displayed photo will automatically rotate counter-clockwise by 90˚. If the vertically placed photo frame is rotated left by 90˚, the displayed photo will automatically rotate clockwise by 90˚. You must advance to the next or previous picture for the orientation to change.

Zoom: Press to zoom in on a photo. Each time the button is pressed, the photo will be enlarged in the sequence of X2, X3, X4, and X5. Use the / / / buttons to navigate around the magnified area. At X5 zoom press the button again to return it to its original size.

Note: Press to resume the Slideshow playback.

PHOTO BROWSE MODE SETTINGS (see below and on the following page).

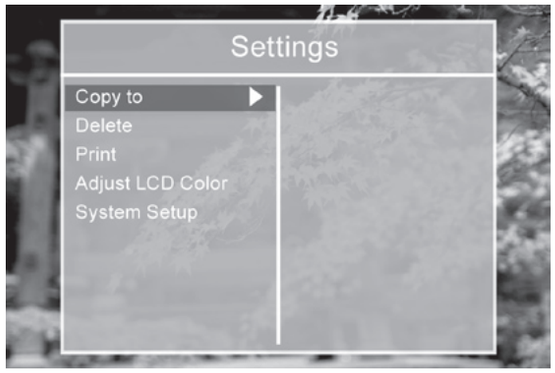

1. During the Browse mode, press to bring up the Settings menu.
2. Use the / / / buttons to browse through available options, and press to select your choice when highlighted.
3. Note: To return to the Browse mode, press EXIT.

PHOTO BROWSE MODE SETTINGS

Press to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Copy to	This option allows you to copy the selected photo from the current memory device to other available memory device(s).
Delete	To delete the selected photo, select Yes. Otherwise choose No to cancel.
Print	Select Yes to print the current photo. Otherwise choose No to cancel. To print, the frame needs to be connected to a PictBridge™ compatible printer. See page 34 for printer setup instructions.
Adjust LCD color	This option lets you adjust the brightness, contrast, tint and color of the LCD screen. Use and to highlight the desired option, then use and to increase or decrease the level. Press EXIT to exit.
System Setup	Bring up the System Setup menu.

PHOTO SLIDESHOW MODE

Supported photo and audio format: JPEG and MP3.

1. Press under any mode to begin a Slideshow.
2. Press EXIT to exit Slideshow mode.

Slideshow settings (see below and on chart on the following page).

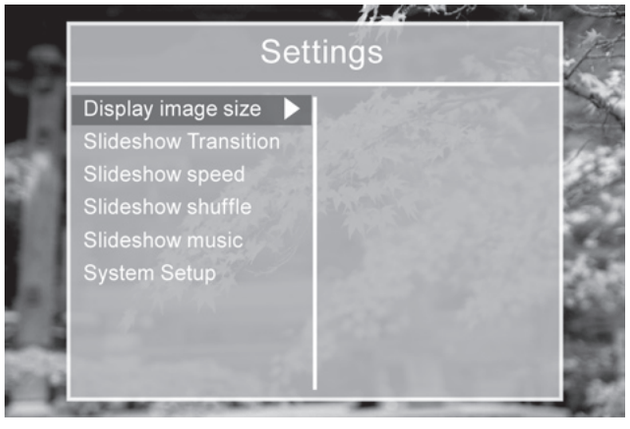

1. During the slideshow mode, press to bring up the Settings menu.
2. Use the /// buttons to browse through available options, and press OK to select your choice when highlighted.

SLIDESHOW MODE SETTINGS

Press ⚙ to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Display Image Size	▪ Select **Normal** to display photos in their original aspect ratio. Black bars may appear on the left/right or top/bottom sides of the screen, depending on whether the photos are taken in landscape or portrait format. ▪ Select **Full Screen** to display 4:3 by full screen. For non 4:3 photo, a small part of the photos on the left/right or top/bottom sides may be cropped.
Slideshow Transition	Select a transition effect during slideshow.
Slideshow Speed	Select a desired transition speed in slideshow.
Slideshow Shuffle	Select **On** to have the slideshow photos shown in random order, or select Off to disable the shuffle
Slideshow Music	Select **On** to enable background music during a slideshow, or Off to disable the music. Note: This function requires music file(s) to be saved in the same memory device as the photos.
System Setup	Bring up the System Setup menu.

SCANNED IMAGE

Supported storage format: JPEG

1. By default, photos that you have scanned are stored in the Scanned Image folder in the internal memory. To browse the scanned photos, select the Scanned Image from the Main Menu and press ⏯ OK to enter.

2. All the scanned photos will be displayed in Thumbnail mode. From here you can view photos individually (in Browse mode) or as a Slideshow. Please refer to the Photo Thumbnail mode (pages 16-18), Photo Browse mode (pages 20-21) and Photo Slideshow mode (pages 22-23) for details.

TRANSFER THE SCANNED IMAGES TO A COMPUTER

When connecting to a PC, the photo frame allows you to transfer music, video and photo files between the photo frame's internal memory, a memory card inserted and PC.

To copy the scanned images to a computer from the internal memory, please connect the unit to a computer via the mini USB cable (supplied).

1. Press POWER button to power on the unit.
2. Press to bring up the System Setup menu under Main Menu. Press or to select USB Link to, then press or .
3. Press or to select PC, then press .
4. Use the USB cable to connect the photo frame to your Windows® 2000 with Service Pack 4 or higher, Windows® XP with Service Pack 2 or higher, Windows Vista® or Windows® 7 PC or notebook.

Warning: Do not connect a USB device to the USB A-type connector and the unit to PC via mini USB port at the same time, it may cause a conflict and may not work properly. Restart the unit if this happens.

ATTENTION: To get a proper connection to your PC and the unit, please stop Photo Slideshow, Music, Video Playback or Scan before connecting the unit to PC.

5. It may take a few seconds for Windows® to recognize the photo frame. When the photo frame is recognized, 3 new removable drives should appear in Windows® Explorer. One of these drives is labeled SCANFRAME, representing the internal memory of the photo frame. The other 2 drives are labeled Removable Disk, representing CF type I card and SD/MMC/MS/xD card in sequential order. Images scanned onto the frame will appear in a folder called “Scanned Images” in the SCANFRAME folder.

Note: Frame Drive letter assignment may vary from PC to PC.

6. Copy all images you wish to transfer and paste them onto your computer in the location of your choice. Images may also be copied and pasted onto one of the removable disk drives if a memory device is inserted into the frame.
7. When you have finished copying pictures, disconnect the computer by double-clicking on the Safely Remove Hardware icon in the lower right screen of your Windows® screen.
8. Highlight the USB Mass Storage Device drive and then click on the Stop button. After notification, unplug the USB cable from the computer and the photo frame.

MUSIC

Supported audio format: MP3.

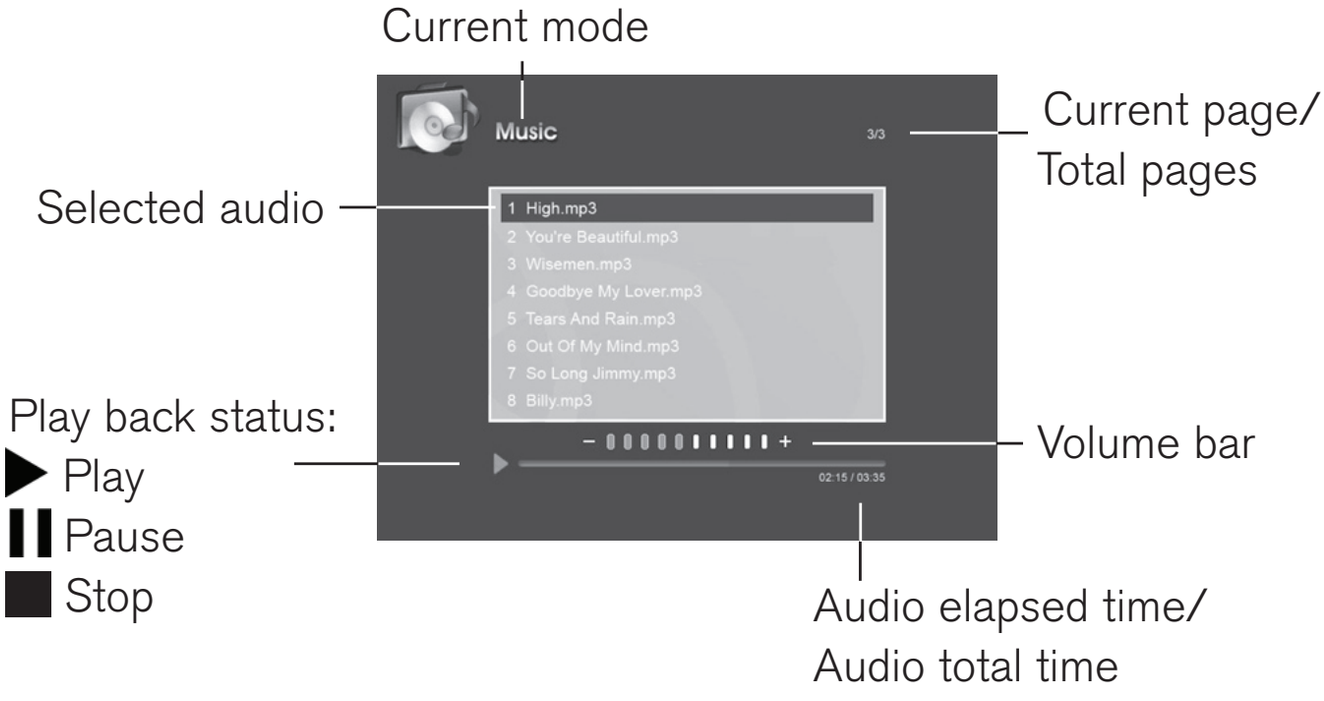

1. Use the ▲/▼/◀◀/▶▶ buttons to select the Music under the Main Menu, then press ▶II/OK to enter. All the available music files in the selected memory device will be listed on the screen.
2. Press ▲ or ▼ to highlight the desired music file, then press ▶II/OK to playback.

AUDIO MODE MENU

Press ⚙ to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Copy to	This option allows you to copy the selected music from the current memory device to other available memory device(s).
Delete	To delete the selected music, select Yes. Otherwise choose No to cancel.
System Setup	Bring up the System Setup menu.

Note: Settings menu will not appear when music is playing, including volume adjustment.

VIDEO

Supported video format: MPEG-1 and MPEG-4

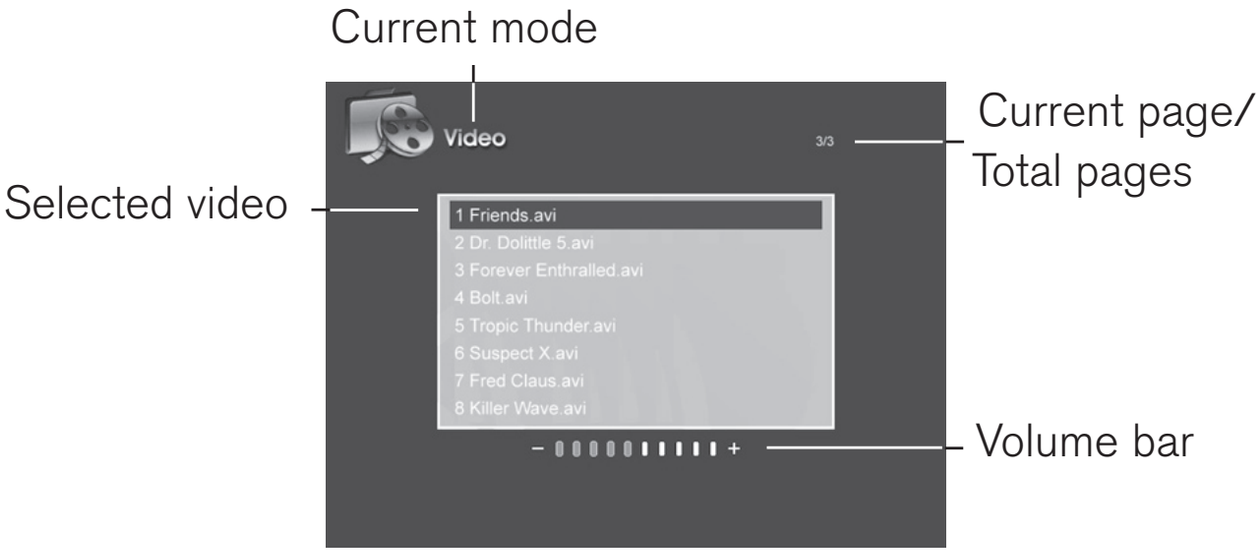

1. Use the ▲/▼/◀◀/▶▶ buttons to select Video under the MAIN MENU, then press ▶II/OK to enter. All the available video files in the selected memory device will be listed on the screen.
2. Press ▲ or ▼ to highlight the desired video file, then press ▶II/OK to playback.
3. Press ◀◀ to fast backward or press ▶▶ to fast forward the video during playback.

VIDEO MODE MENU

Press ⚙ to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Copy to	This option allows you to copy the selected video from the current memory device to other available memory device(s).
Delete	To delete the selected video, select Yes. Otherwise choose No to cancel.
System Setup	Bring up the System Setup menu.

CALENDAR/CLOCK

Use the ▲/▼/◀◀/▶▶ buttons to select Calendar under the Main Menu, then press ▶II/OK to enter.

Note: The Slideshow photos viewed on this screen will be retrieved from the device you selected in the Device Select menu.

CALENDAR MODE MENU

Press ⚙ to access the Settings menu. When finished, press EXIT to exit.

MENU OPTIONS	DESCRIPTIONS
Set Clock	Set the system time for the unit. Press ◀ and ▶ buttons on the remote, or the OK button on the scanner, to switch between the HOUR, MINUTE and 12/24 fields. Press ▲ and ▼ to change the number. When the correct time is showing, press OK to confirm. IMPORTANT: The clock will only maintain the correct time and date when powered on.
Set Alarm	Set the time for the alarm to be activated in the same way as Set Clock above. You can set the alarm to be activated once, daily or off. When the alarm goes off, press any button on the remote to deactivate.
Alarm Ringtone	Set your preference alarm ringtone. Wave option: Built-in ringtone in the internal memory. Music option: The very last updated music file from the selected device will be set as the default alarm ringtone.

Set Date	Set the system date for the unit. Press ◀ and ▶ to switch between the DAY, MONTH and YEAR fields. Press ▲ and ▼ to change the value. When finished, press OK to confirm.
Slideshow Photo	This option allows you to activate slideshow in the clock/calendar display.
System Setup	Bring up the System Setup menu.

SYSTEM SETUP

1. Use the ▲/▼/◀◀/▶▶ buttons to select Setup under the MAIN MENU, then press ▶II/OK to enter.
2. Press ▲/▼/◀◀/▶▶ buttons to select or cycle through available options (see below).

SETUP MODE MENU

OPTION	DESCRIPTION
Language	Choose from available On Screen Display languages.
Sleep Timer	Select a time to automatically turn off the frame, or select off to not use this option.
USB Link To	Use this option to connect the frame to your PC or printer. Select PC if connecting to a PC or select Printer if printing a photo.
Scanner Quality	Use this option to select your desired photo quality of scanned image. Choose from Normal (150dpi) or high (300dpi) quality.
Playback Volume	Adjust the desired volume when playing music or video. Alternatively, press 🔊+ or 🔊− on the remote control.
Factory Default	Options: Yes and No. Select Yes if you wish to restore all options to the factory default. All options will be erased except the scanned image counter, date and clock. Select No if you do not want to make a change.

PRINTING PHOTOS

1. Press POWER button to turn on the unit.
2. Press to bring up the System Setup menu under MAIN MENU. Press or to select USB Link To, then press or .
3. Press or to select Printer, then press .
4. Use the mini-USB cable (included) and connect it to the back of the unit and the other end to a PictBridge™ compatible printer.

Note:

- The print function only works with printers that are PictBridge™ compatible.
- Be sure the USB Link To is setup to Printer selection, otherwise the print function will be invalid.

PRINT A PHOTO

1. Select a photo and display it in Photo Browse mode (pages 20-21).
2. Press to bring up the Settings menu.
3. Use the / / / buttons, select Print, then press .
4. Select Yes and press to print. The photo will then be printed from your printer. Select No to go back.

Note: To change the print size, quality and other settings, please refer to your printer's instruction manual.

FREQUENTLY ASKED QUESTIONS

Q. Why is the clock not keeping the time?

A. The clock will only maintain the correct time and date when powered on.

Q. How far away can I use the remote control?

A. Around 10 feet within an angle of 30 degrees at both left and right.

Q. My remote control doesn't work.

A. You may need to change the battery. Replace with a new lithium 3V-model number CR2025.

Q. Why can't I display some of my photos?

A. Some photo/image file formats are not supported. Please refer to the specifications.

Q. Why can't I play some of my music tracks?

A. Some music file formats are not supported. Please refer to Specifications.

Q. Why can't I play some of my video clips?

A. Some video file formats are not supported. Please refer to Specifications.

Q. Can I delete photos from external memory cards or flash drives?

A. Yes, refer to the Photo Settings section of this document.

Q. Can I delete photos from internal memory?

A. Yes, refer to the Photo Settings section of this document.

Q. Why can't I use my Windows® 98 or Windows® ME to copy content onto the photo frame?

A. The appropriate USB drivers are not supplied for this product and are NOT native to these operating systems

FREQUENTLY ASKED QUESTIONS (CONTINUED)

Q. Why does the Scan function not work?

- A. #1 Make sure the scanner guide is adjusted properly to allow you to insert your photo.
- A. #2 Gently push the photo until it is grasped and pulled through the scanner and into the Photo Feed Slot.

Q. Date/Time settings are lost.

A. The set Date/Time can be maintained for approx. 2 days (48 hours) after the unit is switched off because battery backup is not supported.

Q. Why does the print function not work?

A. Ensure the printer connected supports PicBridge™ standard.

Q. Unable to detect the main unit while connecting to mini USB.

- A. #1 You cannot connect the main unit to the USB 2.0 host and mini USB port at the same time, or it will cause the unit work improperly. If this happens, restart the unit.
- A. #2 Make sure you stop Photo Slideshow, Music, Video Playback or Scan before connecting the photo frame to a PC.

Q. Why is my photo scanning in crooked?

A. Some photo paper is thinner than others and may slide or shift. Using the Protective Sleeve will help keep photo steady while scanning.

Q. My scanned photos show a wide border around the edge.

A. Try reducing the light in the room where you are using the scanner, or move to a darker location.

SPECIFICATIONS

PANEL SPECIFICATION

Size ..... 8"

Aspect ratio 4:3

Resolution ..... 800 x 600 pixels

POWER

External AC Power Adapter ..... +12V/ 0.83A

AUDIO

Speakers ..... 1 W x 2

CONNECTIVITY

USB Ports ..... USB 2.0 (USB A-Type connector for USB flash drive connection and mini USB connector for PC connection)

STORAGE/MEDIA

Internal memory ..... 1 GB

SUPPORTED MEMORY CARDS

Memory cards slot 1 ..... Memory Stick Pro (MS Pro), Secure Digital (SD 2.0), xD Photo Card, and Multi Media Card (MMC)

Memory cards slot 2 ..... Compact Flash (Type 1 only)

SPECIFICATIONS (CONTINUED)

SCANNER

Scanning Module Type, Size	Sheet Feed Type, A6
Scan photo size	1.5" x 2" ~ 4" x 6"
Resolution	Up to 1200 x 1800 pixels, 300 dpi
Storage Format	JPEG

SUPPORTED PRINTER

Printer standard	PictBridge™

MEDIA FILES SUPPORTED

Video file formats	MPEG-1 and MPEG-4 (AVI) Video with MP3 Audio
Photo file formats	JPEG
Audio file formats	MP3

SYSTEM REQUIREMENT

Operation system	Microsoft® Windows® XP Home Edition Service Pack 2 (SP2/SP3), Windows® XP Professional SP2/ SP3, or Windows Vista®, Vista SP1, Windows® 7
Hardware	Intel® Pentium IV/AMD 1.5 GHz (or higher) 512 MB RAM (or higher)

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products “as is.” This warranty does not apply to: a) damage caused by failure to follow instructions relating to product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold “as is” including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 ▪ 800-846-3000 ▪ www.Brookstone.com

641076